

PRO TREK Smart Quick Operation Guide

For both WSD-F30/F20



WSD-F20



WSD-F30

⚠ Important

Thank you for purchasing this Casio watch.
This Quick Operation Guide applies to both **WSD-F30** and **WSD-F20** series watches.

- Before use, start by using the procedure in this Guide **to pair your watch with a smartphone**.
- **Some of the procedures in this guide may be different for the WSD-F30 and the WSD-F20.**
Where this occurs, **the applicable model names are indicated as shown below.**

〈Example〉 **WSD-F30 Lower button** **WSD-F20 Upper button**

- Check which model you purchased before using this Guide.

Getting Ready to Use the Product

Depending on factors such as differences in products and software versions, the screen displays and operations may differ from those shown in this Quick Operation Guide. This Quick Operation Guide shows typical screen displays and operations.

Procedures on the smartphone

Supported mobile phones (as of December 2018)

Wear OS by Google works with phones running Android 4.4+ (excluding Go edition) and iOS 10+. Supported features may vary across platforms and countries.


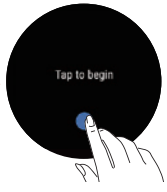 

An older version of the companion app will continue to be available to users with phones running iOS 9.x. But we encourage that our partners with iOS 10+.

- 1 Install the "Wear OS by Google" app.
 - 2* Install the **CASIO MOMENT SETTER+** app.
(Use the latest version. Older versions for Android Wear™ 1.x cannot be used.)
- * Android-only procedure. CASIO MOMENT SETTER+ is recommended, but is not essential.

Important

- The "Wear OS by Google™" app must be installed.
- Ensure that the watch is fully charged.


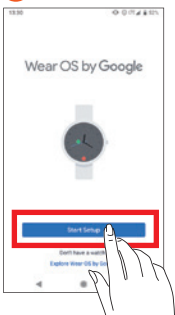 
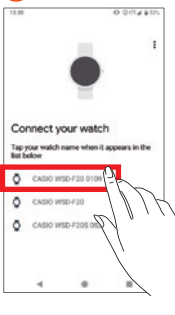 

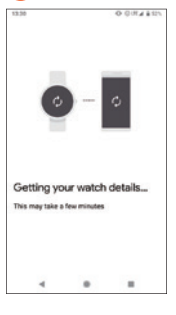 
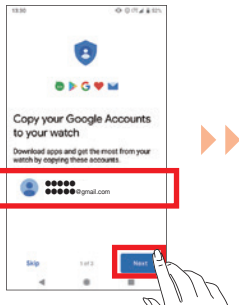 
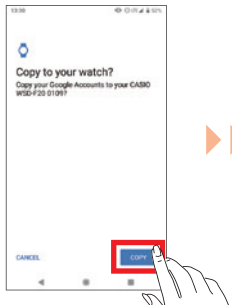 
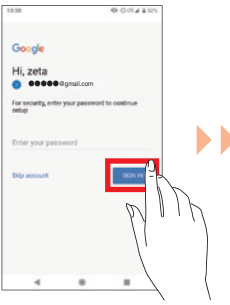 
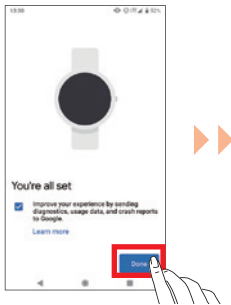 

Procedures on the watch

- 1  Press the **Power button** on the watch.
- 2  Tap the **screen**.
- 3  Select the **language to be used**.

Pairing the watch with your smartphone 1 Android settings

Important

- **Activate the Bluetooth® connection** on your smartphone.
- **Place the smartphone to be paired close to the watch (1 m or closer recommended).**
- This description shows typical screen transitions.

- 1  Launch **Wear OS by Google** on the smartphone.
- 2  Tap "**Start Setup**".
- 3  Tap "**CASIO WSD-F20**".
*In this example, "CASIO WSD-F20" is selected.
- 4  When the pair settings screen appears, check the passkey and tap "**PAIR**".
The same passkey shown on the smartphone screen appears on the watch screen.
- 5  Getting your watch details may continue for some time.
- 6  Set account(s) to "**ON**" selection, and then tap "**Next**".
- 7  Tap "**Copy**".
- 8  Enter the password and tap "**SIGN IN**".
- 9  Tap "**DONE**".
If a confirmation screen then appears, follow the instructions provided on the screen.
- 10  Connection is completed.

Important User must follow instructions to make copy of account in order for product updates to function as intended.

To ensure that the product is fully functional, configure the **settings on the watch** in "Pairing the watch with your smartphone ②".

* The image shows the WSD-F30.



Pairing the watch with your smartphone 1

iPhone settings

Important

 
- Activate the Bluetooth® connection on your smartphone.
- Place the smartphone to be paired close to the watch (1 m or closer recommended).

1




Launch **Wear OS by Google** on the smartphone.


2

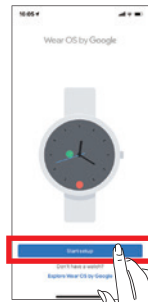Tap "**Start setup**".

 3

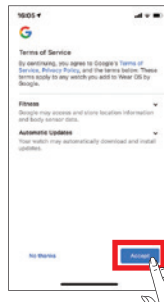Tap "**Accept**".

 4

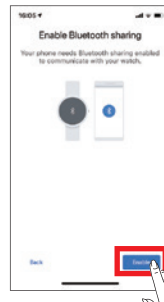Tap "**Enable**".

5

 
Tap "**OK**".

6

Tap "**WSD-F20**".

In this example, "CASIO WSD-F20" is selected.

7

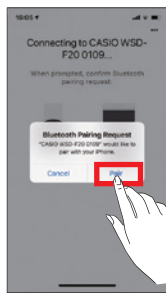
Tap "**Pair**".

8




Once the same code to connect shown on the watch appears, tap "**Confirm**".

 9

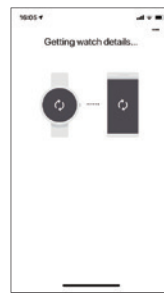


Getting your watch information may continue for several minutes.

 10

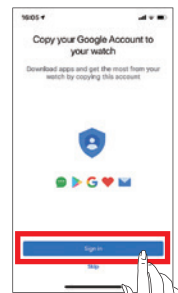

Tap "**Sign in**". If "**Continue as (account name)**" is displayed, proceed to step 15).

 11

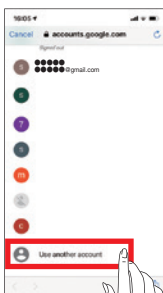


Tap "**Use another account**".

12



Tap "**More options**".

 13

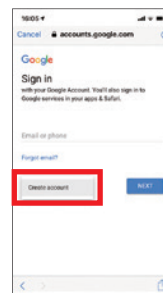
Tap "**Create account**".

14



Follow the on-screen instructions to enter your data and create the account.

 15

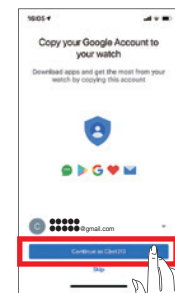


Tap "**Continue as (account name)**".


**Important**

 Users must have and log in with a **Google account** in order for Wear OS by Google updates to function.

16

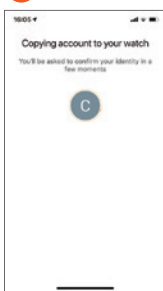


17

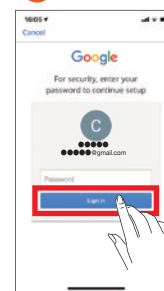 

Enter the password for the created account and tap "**Sign in**". If a confirmation screen then appears, follow the instructions provided on the screen.

 18

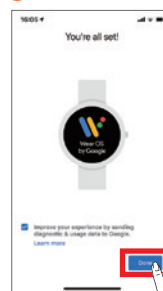Tap "**Done**".

19



Connection is completed.

To ensure that the product is fully functional, configure the settings on the watch in "Pairing the watch with your smartphone".

 


Pairing the watch with your smartphone ②


Watch settings

1 Run the "Tutorial" displayed on the watch face by Wear OS by Google.

- When the watch is paired with a terminal and ready to use, a tutorial appears several times on the watch screen.
- You should **follow the steps in the tutorial at least once**, as it includes important steps in preparing the OS.

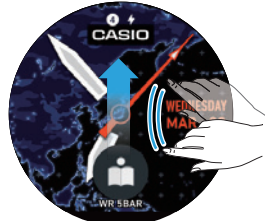

Swipe **up**
on the screen.

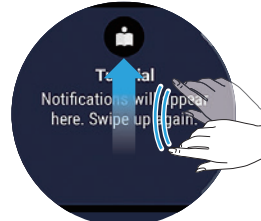 


Swipe **up**
on the screen.



Follow the on-screen
instructions.

 * After the software update, the "Tutorial" changes in the steps below. * The software is automatically updated.

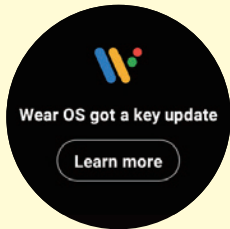

Tap "**Learn more**".



Swipe the screen to check the display. Swipe back to return to the watch display. Check the display in all four directions.



Press the Power button to display the App Menu. Use the Power button to return to the watch display.



Tap and hold the center of the screen to open the watch face selection screen. Tap to return to the watch display.

2 Update to the latest versions of the Casio apps.

 
• To use an **iPhone**, a **Wi-Fi connection** is required.



Press the **Power button** on the watch.




Swipe **down** on the screen. Tap "**Play Store**" in the App Menu.

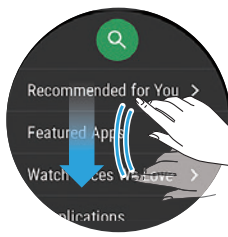

Swipe **down** on the screen.



 Tap "**My Apps**".

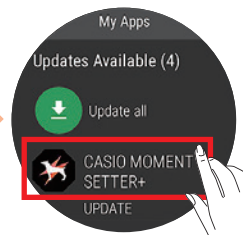


A list of the apps that can be updated appears. "**CASIO MOMENT SETTER+**" must be updated. Updating the other apps also is recommended.

3 Configure the location information settings in "Smartphone and watch".

Unless you plan to use "**Activity**", "**Location Memory**", "**Location**" or "**Traveler**", there is **no need** to set the "**location information**".




 Swipe **down**
on the screen.

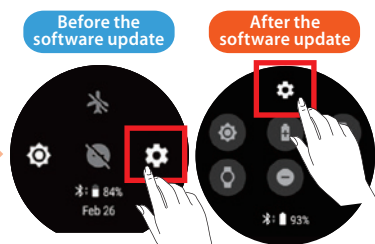


Tap "**Settings**".

 * Screens differ depending on the software version.

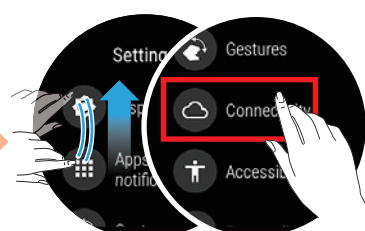

 In the "**Settings**" screen, swipe up and tap "**Connectivity**".

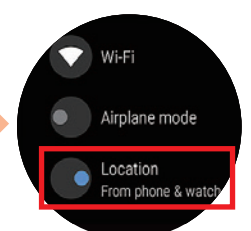

Check that "**From phone & watch**" under "**Location**" is enabled.

This follows on from step 3 in "Pairing the watch with your smartphone 2".

Important Some of the procedures in this guide may be different for the WSD-F30 and the WSD-F20.



Pairing the watch with your smartphone 2

Watch settings

4 In "Apps", enable all the "Permissions" for Casio apps.

Swipe down on the screen.

Before the software update Tap "Settings".

After the software update

In the "Settings" screen, tap "Apps & notifications".

* Screens differ depending on the software version.

Swipe up and tap "App permissions".

Tap "System Apps".

Find and tap "CASIO MOMENT SETTER+".

In the app permissions screen, set "Calendar", "Contacts", "Location", "Microphone" and "Receive complication data" to ON. (Tap and slide the switch to the right.)

* "Microphone" is displayed after Auto Update.

5 Enable the "Save daily activity records" setting.

If you omit this step, you will not be able to use "TOOL: My Graph".

WSD-F30 WSD-F20 Press once

With a watch face displayed, press the "TOOL" button.

WSD-F30 Lower button
WSD-F20 Upper button

Swipe left on the screen.

Tap "Settings".

Tap "Save daily activity records" and set it to ON.

Tap "I agree".

Saves information about all your daily workouts. Enable this setting to use the functions below.

- Activity Graph
- Steps and calories burned
- Some MOMENT SETTER menu items

This function uses some user storage.

6 Enable the "Save Daily Location Info" setting.

If you omit this step, you will not be able to use the "Route Display", "Check History" or "Revisit" functions in "Location Memory".

WSD-F30 WSD-F20 Press once

With a watch face displayed, press

WSD-F30 Upper "MAP" button
WSD-F20 Lower "APP" button

Swipe up on the screen.

Tap "Settings".

Tap "Save Daily Location Info".

Tap "Every 1 minute" or "Every 6 minutes".

Saves all info about your daily movements. The location storage interval is somewhat irregular.

This function uses some user storage. Increasing the recording frequency will run down the battery.

 
 
Main Screen Transitions

Before the software update

You can operate this smartwatch by swiping its touchscreen with your finger.


Notifications

Configure the various notifications.

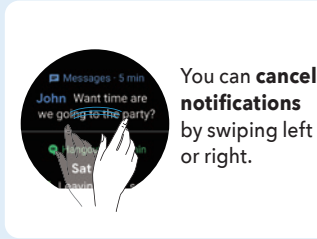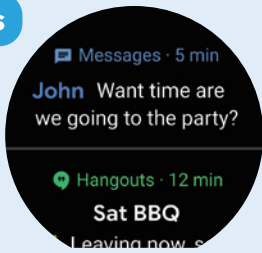

Watch face settings

 These watches come with **Casio original watch faces** that you can switch between whenever you like.

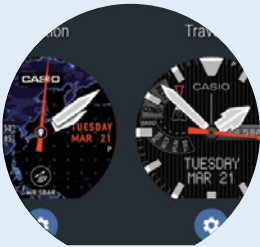

*See "Changing/Adding original watch faces" for details.

Swipe right or left on the watch face display.

Swipe up on the watch face display.

Swipe down on the watch face display.

Watch face display

 
Touch screen

Power button

Press once

App Menu


This screen displays a list of the available apps.

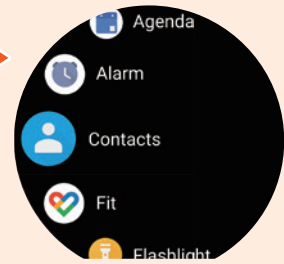

* See "Launching/Adding apps" for details.

Settings

 
You can use this setting to configure the "Brightness Adjustment", "Airplane Mode", "Settings" and "Silent Mode".

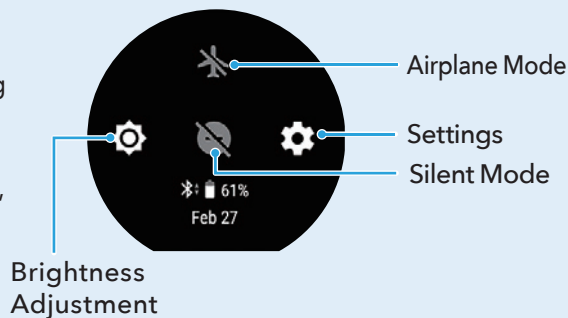

Main Screen Transitions

After the software update

 You can operate this smartwatch by swiping its touchscreen with your finger.

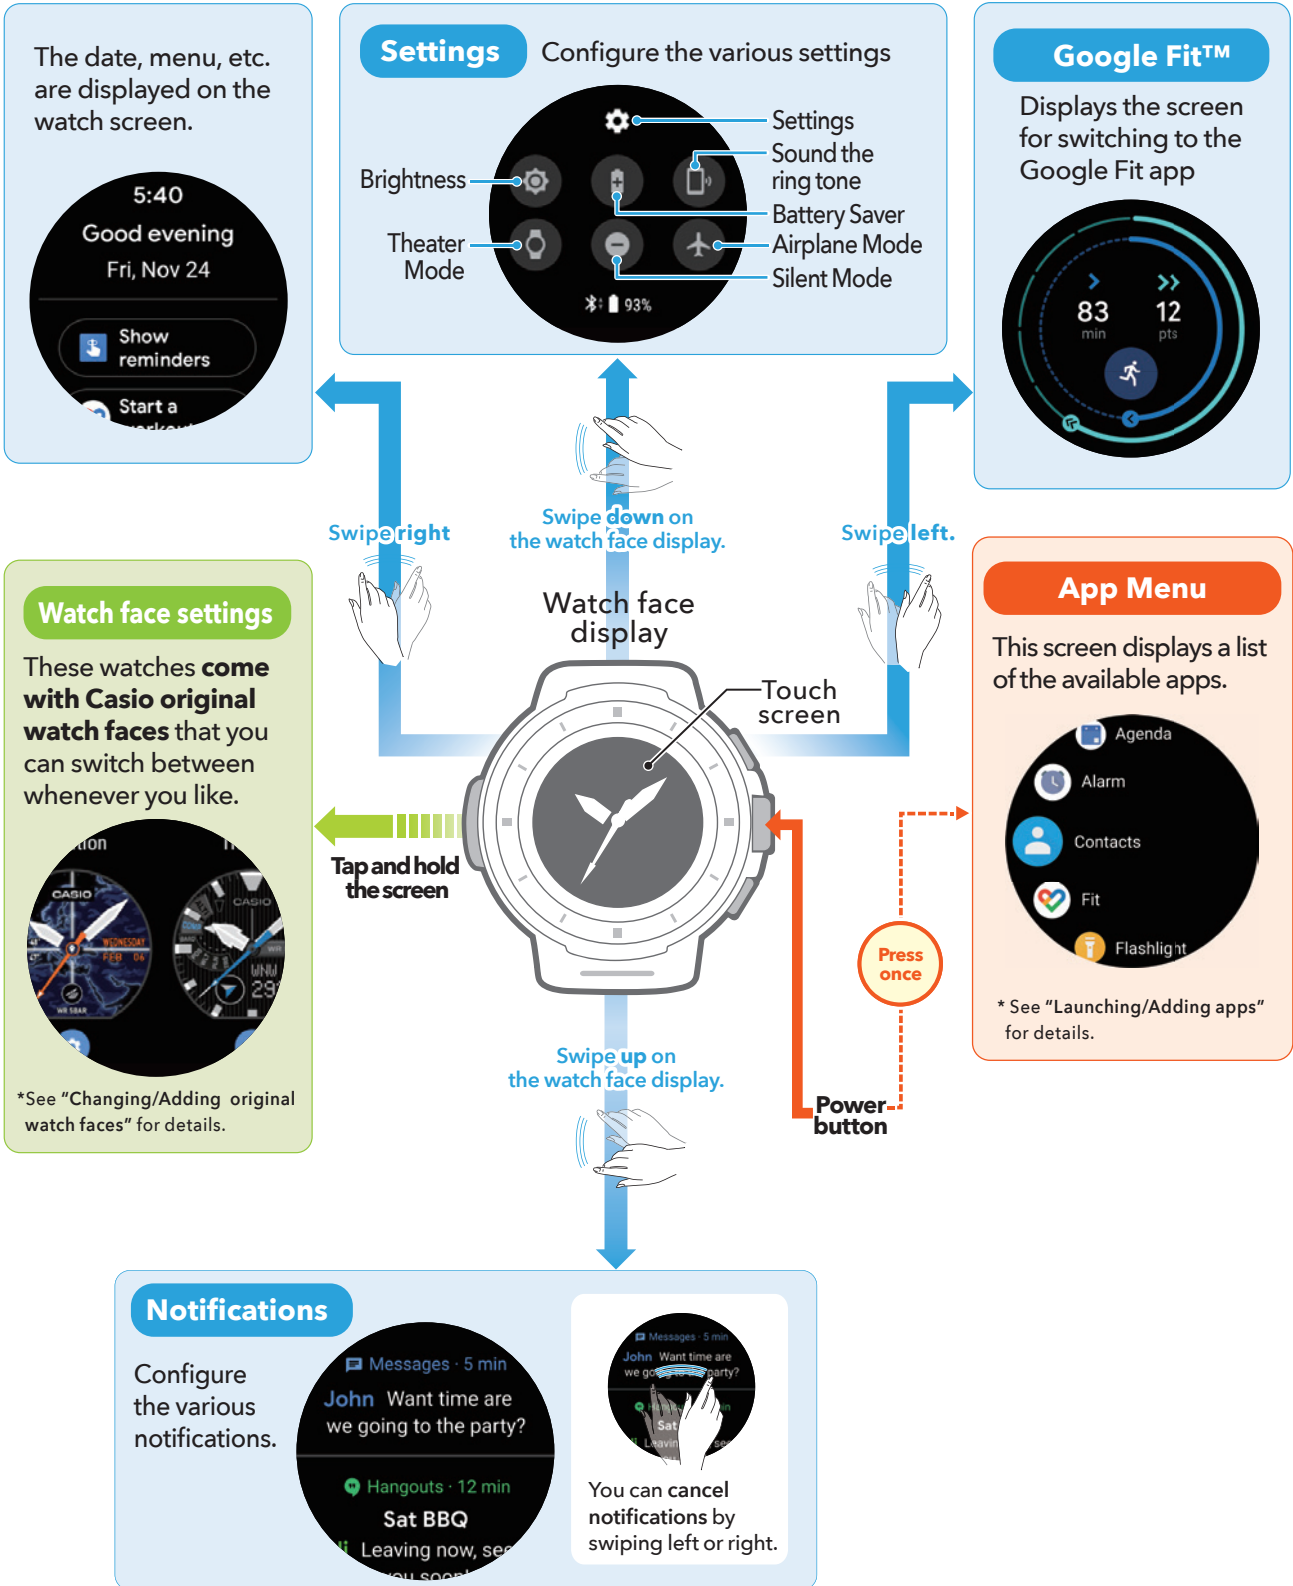


Launching/Adding apps

Launching an app



 By **holding your finger** on the app so that a star ★ appears next to the app, you can **assign the highest priority** to the app.

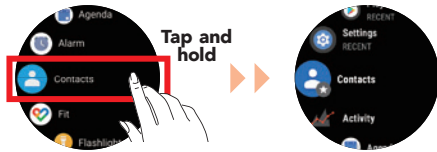


Adding an app

To add an app, you need to install the app on both the smartphone and the watch. (Installation on the smartphone may not be necessary for some apps.)

Android smartphone users

 
Procedure from the smartphone

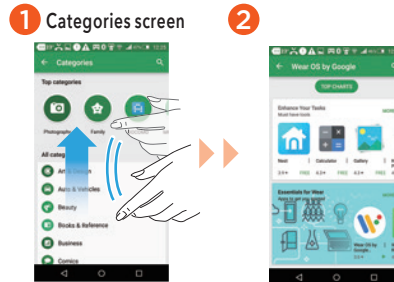

In the **Play store** category screen, swipe up and tap **"Wear OS by Google"**.

Install your chosen app.

 Procedure from the watch

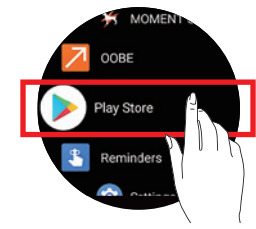

Tap **"Play Store"** and install your chosen app on the watch.

iPhone users

Procedure from the smartphone

To add the app on your iPhone, install it from **"App Store"**.

Procedure from the watch

Connect to the watch via Wi-Fi and install the app from **"Play Store"** on the watch.

* The image shows the WSD-F30.



Changing/Adding original watch faces

Original watch faces

These watches **come with Casio original watch faces** that you can switch between whenever you like.



[Frontier]

Shows a map graphic as the time display background, with colors to indicate places you have visited. It shows how much fun it is to travel the world.

* WSD-F30 only



Outdoor

Daily

[2-layer]

Choose between two styles: Outdoor or Daily.

* WSD-F30 screen



[Location]



[Traveler]



[Multi]



[World time]



[Authentic]



[Place]



[Journey]

Changing the watch face

- 1 Watch face display



With a watch face displayed, tap and hold the center of the screen.

- 2 Select an option from the "Favorites".

 


In the "Favorites" list, choose a screen you like and tap to set it.


Adding a watch face (on the watch)



Tap "See more watch faces".

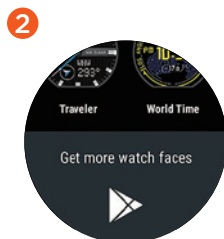

 Swipe up and tap "Get more watch faces".

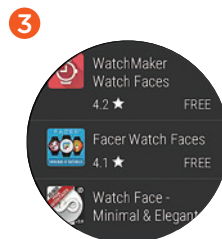


Select the watch face you want to add and install it.

Adding a watch face to "Favorites" (on the watch)

You can add a watch face to "Favorites" by selecting the watch face from **See more watch faces**.



 Tap "See more watch faces".

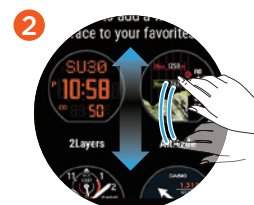

You can **swipe up or down** to choose your preferred face.

! Important Some of the procedures in this guide may be different for the WSD-F30 and the WSD-F20.



Timepiece Mode (WSD-F20) Multi Timepiece Mode (WSD-F30)

Setting/Canceling

These modes use a monochrome LCD to show the time. Because these modes disable the GPS and communication functions, they use only a tiny amount of power and are very useful when you want to conserve as much battery power as possible but still display the time.

WSD-F20

 
Setting Timepiece Mode




WSD-F30

Setting Multi Timepiece Mode

You can choose either Outdoor style, which shows the altitude and atmospheric pressure, or Daily Style.

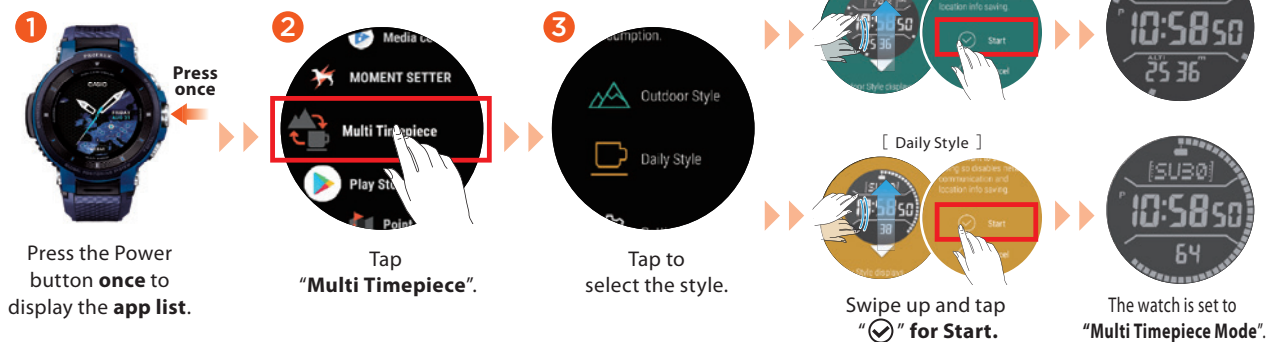

Canceling the Modes

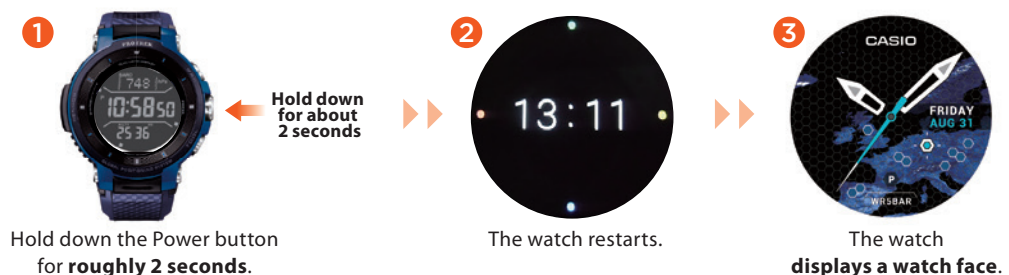 

Functions available without a smartphone connection

The functions shown below can still be used when the watch is not paired with a smartphone. (However, to reset the watch so that it can be used, you will need a smartphone.)

- **TOOL functions**
(Compass, Altimeter, Barometer, Sunrise/sunset time, Tide Graph, My Graph)
- **Checking the time and date**

- **Setting an alarm**
- **Using the stopwatch**
- **Using the timer**
- **Counting the number of steps**

- **Changing the watch face**
- **Setting the watch to Airplane Mode**
- **Listening to music on your watch**

* Only if a Bluetooth® headset is connected to the watch and the music files are already installed

See Wear OS by Google Help for details: <https://support.google.com/wearos/>